

Assembly instruction for wheel bearing kits

Einbauhinweis für Radlagersätze
Instrucciones de montaje de kit de rodamiento
Instructions de montage pour kit roulement de roue
Инструкция по установке подшипника ступицы
Istruzioni di montaggio per kit cuscinetti ruota



MEYLE no. 100 652 0001 | 100 752 0004

Short no. MWH0034 | MWH0040

To fit/Passend für/Aptos para/Convient pour/для/Adatti per

Audi | Seat | Skoda | VW



**Installation by qualified personnel only.
Car manufacturer's instructions to be
observed closely.**

Einbau nur durch geschulte Fachkräfte. Hinweise der Fahrzeughersteller genau befolgen.


El montaje sólo debe realizarse por un técnico instruido. Siga exactamente las indicaciones del fabricante del vehículo.

Installation uniquement par main-d'oeuvre spécialisée. Suivre les indications du fabricant d'automobile pour l'installation.


Монтаж должны производить только обученные специалисты. Следует точно соблюдать инструкции завода-изготовителя автомобиля.

Montaggio solo da parte di meccanici specializzati. Sono da seguire esattamente le istruzioni fornite dal costruttore del veicolo.


1

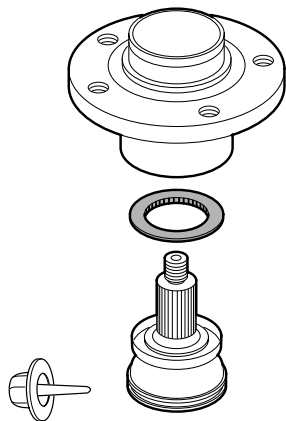


2

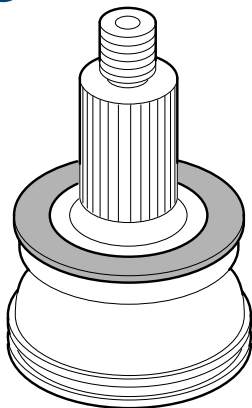


3

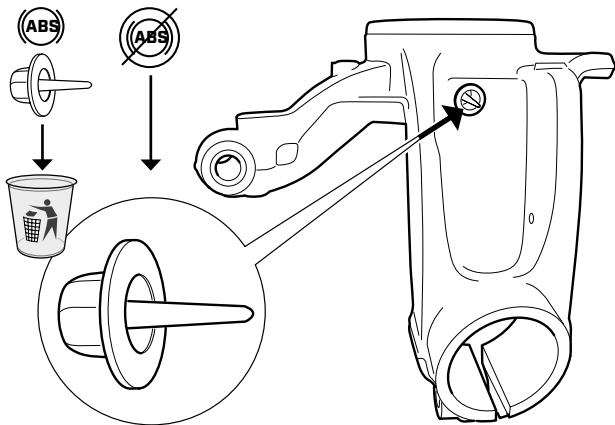

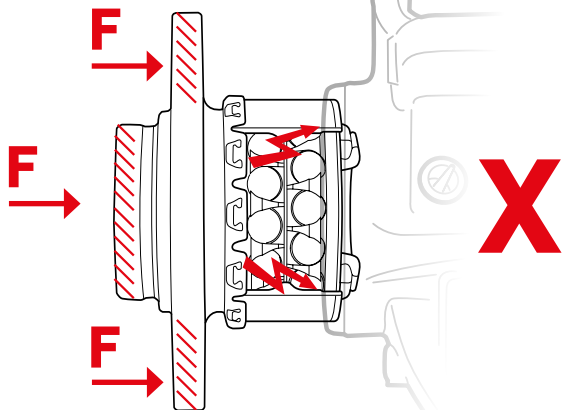

4

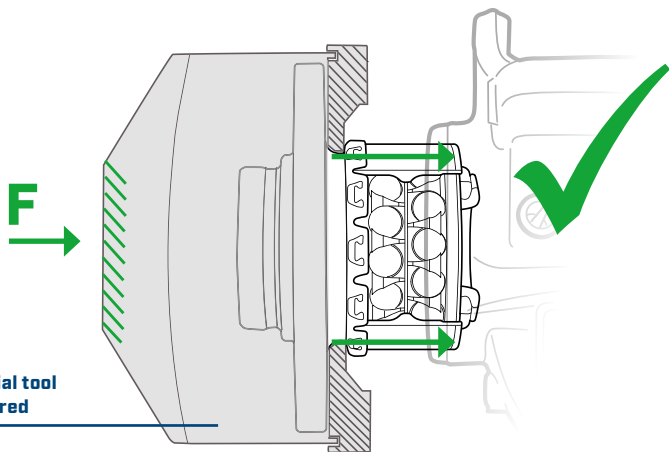

Special tool
required